

NEEDLE INSTALLATION

## NP-78

Crosley now offers a replacement needle specifically designed for playing your 78 rpm records.

### PLAYING RECORD:

1. Remove the needle from the wooden case.
2. Use the SPEED SELECTOR on the turntable to select the 78 rpm speed.

### REMOVING NEEDLE:

1. Gently pull down the tip of the cartridge.
2. Pull cartridge forward.
3. Pull out and remove.



### INSTALLING CARTRIDGE:

After following "Removal instructions" above, follow steps 1 to 4.

1. Position grey cartridge with diamond stylus facing down.
2. Line up the back of the needle with tone arm (as shown in picture 1 below).
3. Insert the cartridge with its front end at a downward angle (as shown in picture 2 below).
4. Move front end of needle toward tonearm until it snaps into place.



### ADDITIONAL INFORMATION:

- The grey cartridge has a very small, U-groove diamond stylus that is barely visible.
- Take note that the NP-78 needle you are receiving is not the same as the needle already on the tone arm.
- This needle is specifically designed for 78 speed records only. Do not use for 33-1/3 and 45 rpm records.
- To order additional NP-78 needles, please include the following information with a check or money order:
  1. Name and address
  2. When ordering multiple needles, multiply \$24.95 by quantity.
  3. Make payment in the form of check or money order, payable to Modern Marketing Concepts. Send order request to address below.Sorry, NO credit card purchases.

**CROSLEY®**

Thank you for purchasing Crosley® products and enjoy the music.  
1220 East Oak Street • Louisville, Kentucky 40204

907-244200-001

Size: 135.5 x 168 mm ( with die-cut )  
Color: 4C + 1C  
Paper: 350gsm Artpaper

Model: 2455  
Instruction Card  
Part no.: 907-244200-001  
SP1192  
Date: 02 Nov 04