


Front

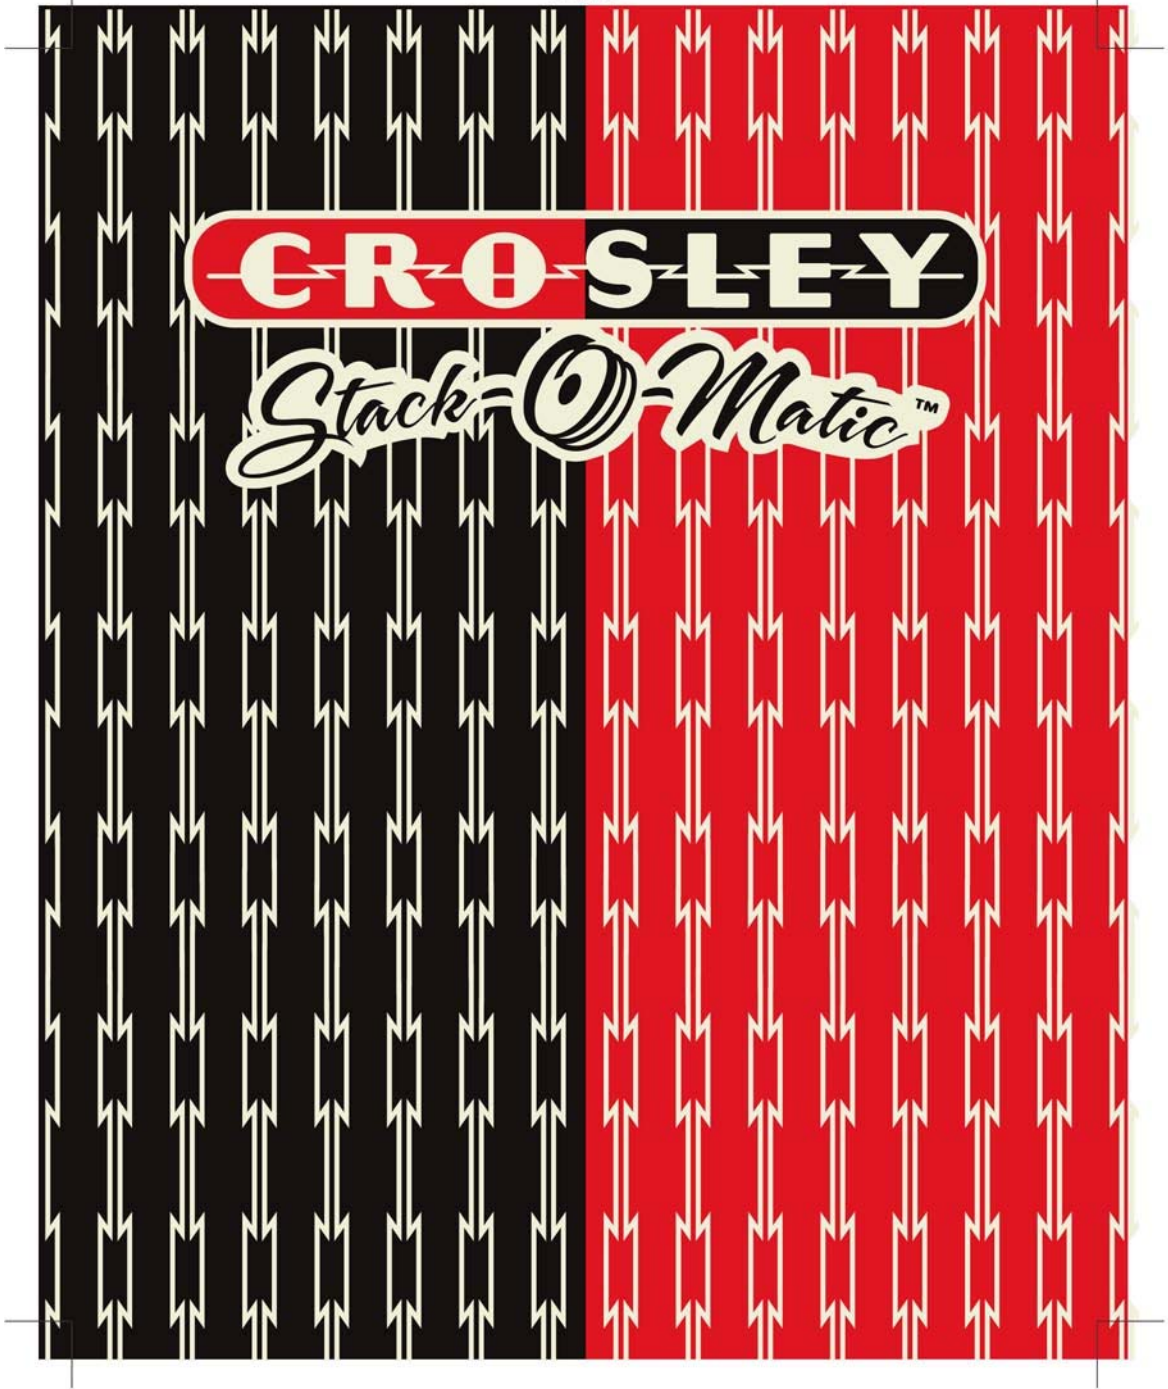

Back

## NS-1

# NEEDLE INSTALLATION

### PLAYING RECORD:

1. Flip the protective needle cover up.
2. To engage turntable, move the TURNTABLE SWITCH to the "ON" position.  
Turntable will begin to turn.
3. Gently move the tone arm to the record.

### REMOVING NEEDLE:


1. Gently pull down the tip of the cartridge.
2. Pull cartridge forward.
3. Pull out and remove.



### INSTALLING CARTRIDGE:

After following "Removal instructions" above, follow steps 1 to 4.

1. Position red cartridge with diamond stylus facing down.
2. Line up the tab on the back of the needle with the tone arm (as shown in picture 1 below).
3. Insert the cartridge with its front end at a downward angle (as shown in picture 2 below).
4. Move front end of needle toward tonearm until it snaps into place.

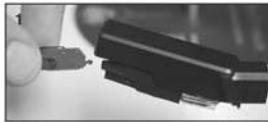

### ADDITIONAL INFORMATION:

- The red cartridge has a very small crystal diamond stylus that is barely visible.  
Take note that the replacement needle you are receiving is the same as the needle already on the tonearm.
- This needle is safe for 33 1/3, 45 & 78 speed records.
- Replacing the needle depends on how often you use your turntable.
- This diamond stylus will provide an average of 1000 hours playing time.
- To order additional needles, please include the following information with a check or money order:
  1. Name and address
  2. When ordering multiple needles, multiply \$14.95 by quantity.
  3. Make payment in the form of check or money order, payable to Modern Marketing Concepts.  
Send order request to address below. Sorry, NO credit card purchases.

**CROSLEY®**

Thank you for purchasing Crosley® products and enjoy the music.  
1220 East Oak Street • Louisville, Kentucky 40204

907-245500-001

Model: 2455  
Instruction Card  
Part no.: 907-245500-001  
Job no.: 22904  
Date: 30 July 04

Size: 135.5 x 168 mm ( with die-cut )  
Color: 4C + 1C  
Paper: 350gsm Artpaper